

GREENVILLE – SCOTT PETROLEUM

Shell Terminal ID: Y07B

Terminal Loading Instructions

SOPUS Loading

Effective 07/15/2025

Rack Customer Pick Up

1. Driver enters the rack.
2. Connect the scully and attach the vapor hose.
3. Connect the product load arm.
4. At the rack, enter driver pin number.
5. Enter Supplier #60.
6. Enter 7-digit customer number.
7. Enter 3-digit PIN number.
8. After load completion, disconnect loading arm, vapor hose and scully.
9. Collect BOL from BOL room.

NOTE: FOR ANY AUTHORIZATION PROBLEMS CALL THE LOADING SUPPORT SERVICE HELPDESK AT 800-345-6666.

Please use a safe phone/location as Specified in your Driver Training Instructions.