

Northville Holtsville, NY

Shell Terminal ID: Y745

Terminal Loading Instructions

SOPUS Loading

Effective 06/01/2025

Rack Customer Pick Up

At Loading Bay

- Insert Loading Card
- Enter driver pin #
- Enter vehicle #
- Enter loading #
 - Contract number, if applicable
- Products to load
- Once authorized to load, proceed as usual

Exit BOL Printer

- Insert Loading Card
- Check BOL for Accuracy
- Exit terminal

NOTE: FOR ANY AUTHORIZATION PROBLEMS CALL THE LOADING
SUPPORT SERVICE HELPDESK AT 800-345-6666.

Please use a safe phone/location as Specified in your Driver Training Instructions.